Six Shooter Clutch Adjuster Install

Our goal is to make the install a breeze. Please read the entire guide. If you have a tech question, you can text us here.

Proper maintenance of the clutch cable is crucial in the actual installation of the Six Shooter.

- 1. Loosen the lug nuts on the left rear wheel 1/4 turn before jacking the vehicle up.
- Jack up the rear of the vehicle and place stands underneath the chassis.
- 3. Remove the wheel and place it under the chassis as a fail-safe.
- 4. Locate the clutch lever on the transaxle with a cable and factory wing nut.
- 5. Spray WD40 on the cable and remove the wing nut.
- 6. Inspect the cable. You need to clean the cable if the threads are full of dirt and grime. There are a couple of different ways to do this. Use a wire brush and a cleaning solution, or use a 7mm x 1.0 thread chaser.
- 7. Once the cable is clean and ready to go, apply grease or anti-seize to the cable.
- 8. Raw Six Shooters are steel, so they must be coated to prevent rust. Black Six Shooters are ready to go. Stainless version will need anti-seize. Apply grease/anti-seize to the back of the nut and the threads.
- 9. Install on the cable. As you tighten, check your pedal for free play and engagement. Once the ideal feel is attained, wipe off the residual grease/anti-seize from the cable. This would become a dirt and dust magnet if you don't.
- 10. Re-install the wheel and hand-tighten the lugs.
- 11. Jack up the vehicle, remove the jack stand, and lower it. Then torque the lugs to factory specs.

Enjoy an adequately adjusted clutch. Make minor adjustments with ease now that you have a Six Shooter installed. TAG us on Social Media with #AirkewldArmy!

Video Tutorial



Tools you need



help@airkewld.com

Doc 1.4 12/15/23